

Why am I seeing color bars as my physical output?

Last Modified on 17/06/2021 7:13 am ADT

This is typically caused by the UDP ports not being forwarded to the server. The backpacks send UDP packets directly to the server, and must be properly forwarded.

For more details about necessary ports for LiveU servers [click here](#).
